



**IMPORTANT INFORMATION PLEASE
READ BEFORE
USING THE
PowerPlay™ PT2010**

The Pleasure Tec PT2010 is **CE Marked**, tested and approved to EC Directive 89/336/EEC [BS EN 61000-6-1 :2001 & BS EN 61000-6-3 :2001]

CONTENTS

Subject	Page No:
Operating Features	3
Tips, hints and warnings for pleasurable safe play	4 & 5
LED indicators	6
Changing Battery	6
The Power Switch	7
Features of the unit	7
Front Panel Controls	8
Connection Cables	8
Operating Modes	9 & 10

OPERATING FEATURES

The controls on the **Pleasure~Tec PowerPlay™ PT2010** have been placed on the front panel for ease of use.

The programme selector dial incorporates two 'off' positions, one to the left and one to the right, these shut down the power. In between these positions are the 4 operating programmes.

The Intensity level dial channels A & B operate independently of each other and therefore by increasing the level on one channel it will not weaken the intensity level on the other channel.

The two channels [A & B] are electrically isolated and therefore they always alternate their power output.

One of the unique features of **PowerPlay™ PT2010** is that not only the intensity levels are independent but in addition the frequency levels can be independently tuned. This will give a far greater range of stimulation during play for the user.

Also the **PowerPlay™ PT2010** can be even more finely tuned by using the frequency modulator [FM] dial, which will vary the pulses adding even greater variations to your play.

TIPS, HINTS & WARNINGS FOR PLEASURABLE SAFE PLAY

As with all electrical products, safety must be of paramount importance.

Take note of the following:

- It is generally recommended that if the **PT2010** is going to be used above the waist that extreme caution is taken and that supervision is carried out at all times and that only Bi-polar items are used
- Do not use the **PT2010** above the waist if you have now or any history of heart conditions or any other medical conditions that you may think Electro play above the waist could cause problems. If in doubt consult a medical expert.
- The use of our products is entirely at your own risk
- You should always insure intensity levels are turned down to **Minimum** before resetting FM (frequency modulator).
- Designed not to be powered from any source other than the standard 9v. battery similar to the one supplied.

TIPS, HINTS & WARNINGS FOR PLEASURABLE SAFE PLAY (CONT)

- The use of electro stimulation boxes is only recommended for use with attachments and accessories specifically designed for safe play and are not recommended for use with body piercing.
- If you should incur any adverse reactions, such as skin tenderness while using the unit it is recommended that you discontinue use.
- It is essential that before connecting any attachments or accessories to the box or the recipient ensure box is switched off and all operating controls are at minimum.
- You should always make yourself aware of your partners reactions during use.
- The unit should not be used on two people at one time.
- Must not be used if you are or suspect you may be pregnant.

LED INDICATORS

The light emitting diodes [LED] will flash **RED** when the power is switched on they will increase in speed when the frequency rate dials are turned clockwise.

This is a visual aid which will provide you with a guide as to the speed of the pulsing.

Please note if no response from the LED please check that the battery is fitted correctly and that it does not require replacement.



CHANGING BATTERY

- Turn unit off.
- Remove back cover, disconnect and remove old battery [discard this safely]
- Replace with a reputable 9v. battery
- Do not use rechargeable batteries in this unit.
- Replace back cover.

THE POWER SWITCH

The **PowerPlay™ PT2010** unit is activated by the programme switch.

There are 6 settings, 4 settings for defining programmes available and 2 off settings [see operating mode].


For ease of use all controls have been placed on the front of the unit.

FEATURES OF THE UNIT

The **Pleasure~Tec PowerPlay™ PT2010** has been designed to incorporate a wider range of sensations on 4 different settings ranging from sensual to even greater levels than ever before achieved in one unit.

This PT2010 has been designed with not only beginners in mind, but the more experienced have not been neglected, it will take some time to reach higher levels. ***Do Not Attempt All At Once*** be patient and progress slowly.

Front Panel Controls

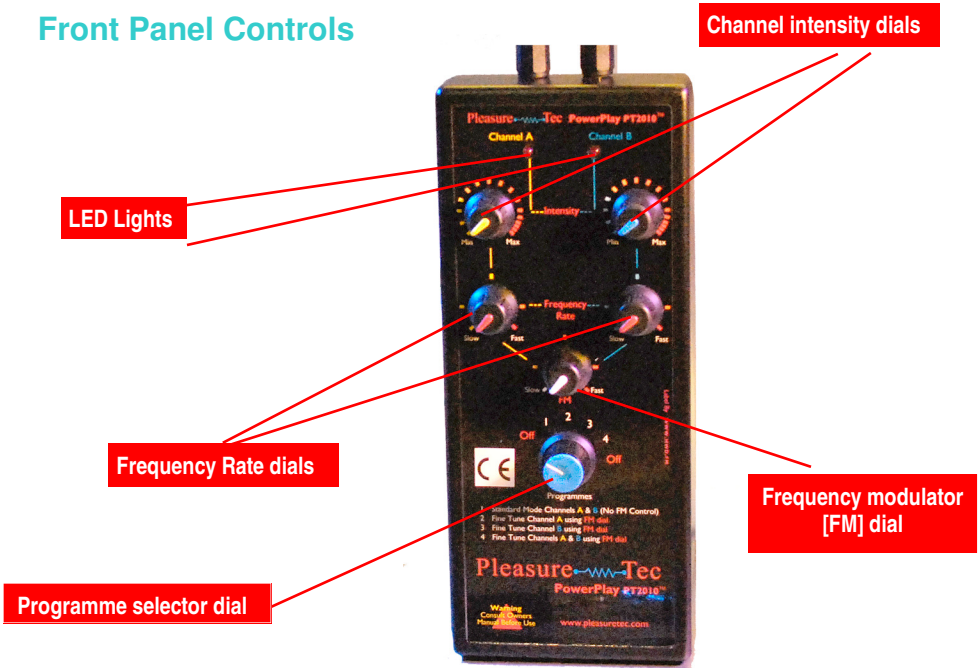

Connection Cables

The **PowerPlay™ PT2010** is supplied with 2 output leads. These leads will fit most 'made for play' accessories currently on the market.

The leads are fitted with 4mm banana plugs.

OPERATING MODES

Always start with all dials switched to their far left {anticlockwise}.

After connecting the leads to the box and the required attachments, proceed with caution.

PROGRAMME 1

1. Switch programme selector to 1 – Normal operating mode, **Red** LED lights will flash.
2. Very SLOWLY turn intensity dials clockwise until a light sensation is felt, this can then be increased to your required level. **Red** LED lights will still flash.
3. For more variety incorporate the frequency rate dials by turning clockwise again until desired level are reached. **Red** LED lights will increase in speed to indicate pulse frequency.
4. Please note that the FM dial is not effective in this programme.

PROGRAMME 2

1. Switch Programme selector to 2 - This automatically alters the programme settings.
2. Very SLOWLY turn intensity dials clockwise until a light sensation is felt, this can then be increased to your required level. **Red** LED lights will still flash.
3. For more variety incorporate the frequency rate dials by turning clockwise again until desired level are reached. **Red** LED lights will increase in speed to indicate pulse frequency.
4. FM dial can now be used to further fine tune channel A for greater variety.

OPERATING MODES (CONTD)

PROGRAMME 3

1. Switch Programme selector to 3 - This automatically alters the programme settings.
2. Very SLOWLY turn intensity dials clockwise until a light sensation is felt, this can then be increased to your required level. Red LED lights will still flash.
3. For more variety incorporate the frequency rate dials by turning clockwise again until desired level are reached. Red LED lights will increase in speed to indicate pulse frequency.
4. FM dial can now be used to further fine tune channel B for greater variety

PROGRAMME 4


1. Switch Programme selector to 3 - This automatically alters the programme settings.
2. Very SLOWLY turn intensity dials clockwise until a light sensation is felt, this can then be increased to your required level. Red LED lights will still flash.
3. For more variety incorporate the frequency rate dials by turning clockwise again until desired level are reached. Red LED lights will increase in speed to indicate pulse frequency.
4. FM dial can now be used to further fine tune channels A & B together for even greater variety.

UPGRADE POLICY

We are constantly looking to develop and grow our product range.

If you are the original owner and have sent in your **registration form**, you will be automatically entitled to receive product updates in advance of them being generally available.

This will give you the opportunity to purchase at a discounted rate and take advantage of our special offers.

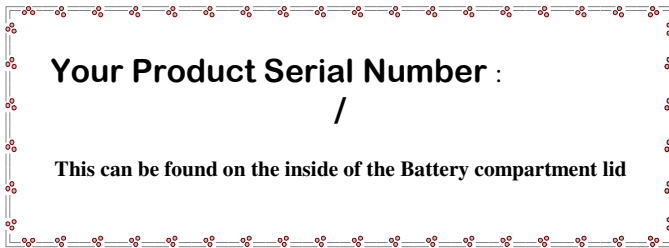

Your Product Serial Number :
/
This can be found on the inside of the Battery compartment lid

Do I need to complete the registration form ?

This is not obligatory but gives you the benefit of the free life time warranty and the opportunity to purchase new products at discounted rates. (you have the option on the registration form not to receive any mailings but still choose the life time warranty).

LIFE TIME WARRANTY

The Pleasure~Tec **Power Play™ 2010** has been designed to be reliable and you should not incur any problems.

In the unlikely event of the unit requiring attention, simply return it to the manufacturer who will, at their discretion repair or replace it, free of charge.

As long as you are the original owner and have sent back the registration document to Pleasure~Tec within 30 days of purchase, you simply pay the shipping to us, we pay shipping back to you.

This warranty does not cover normal wear & tear, damage to casing or any other kind of misuse or abuse.

This life time warranty will be void if the unit has been tampered with in anyway.

There are no user serviceable parts.



135 Gloucester Road North, Filton, Bristol, England, BS34 7PY
Tel: 0044(0)117 931 5400 Fax: 0044(0)117 931 5200
Email: sales@pleasuretec.com www.pleasuretec.com